GLASS BALUSTRADES DIY

Installing Post Systems


Prior to installation, make sure all surfaces are clean.

Using more masking tape, mark where your posts are to be situated.



Using the original plan, mark out where your posts will be positioned using a marker pen.

If you are fitting to concrete, drill 8mm holes to a depth of 80mm then use 100mm stainless steel floor anchor fixings to secure (hand tight) the posts.

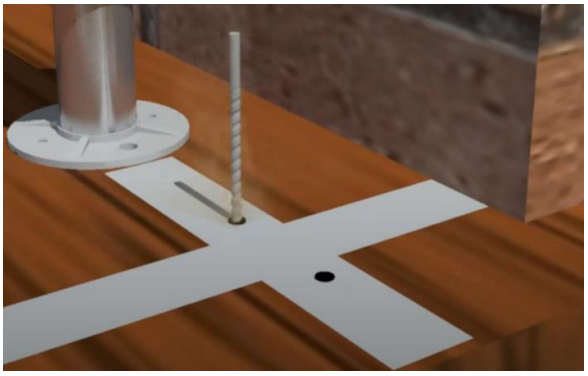

If you are fitting to WOOD, drill 6mm x 80mm pilot holes and use 80mm stainless steel coach screws to secure (hand tight) the posts.

Use a spirit level at the top, rear and front of each post to check they are plumb. You can use shims for any corrections that need to be made.

Once the posts are plumb, tighten up the fixings.

Glass Panels

Working from the inside, remove the front part of the clamps.

Place 2 x 80mm high blocks between the posts for the glass panel to rest on as you fit them.

Rest the glass panel on the blocks and centre between the posts.



Place the front part of the clamps on the posts and fix both screws securely.

Continue this process to complete your whole balustrade system.

Enjoy the view!